

LINE LOCK KIT

INSTALLATION GUIDE

□ PRODUCT CONTENT

- LINE LOCK X 1
- BRAKE HOSE: 170MM X1, 180MM X 1
- BRAKE LINE ADAPTER X 1
- INSTALLATION GUIDE X 1

□ PRODUCT DESCRIPTION

This product is designed for those vehicles with upgraded rear brake kit which does not enable to retain the OE parking function, fitting this product can allow the vehicles to have stock handbrake parking. However, this product is not suitable for a car being in motion or drifting.

Before usage of this product, pump the brake pedal and turn the lever to lock the pressure in the rear brake lines. Make sure to bleed the brake lines completely before using this product.

This product has one year limited warranty from the date of purchase. Brake system is a critical safety item so installation of this product must be performed by a professional and experienced technician. The installer should determine whether this product is suitable for being used on the street/road; therefore, we assume no responsibility for accidents, damage, injuries or death.

□ INSTALLATION INSTRUCTION

1. First of all, remove the board, stock parking brake control lever, and parking brake cable.



2. Fit the line lock to the hydraulic brake system and have it mounted in an appropriate place with 4 fixing screws. Put the OE board back to the vehicle is recommended. Then, make sure that the brake control lever turns freely.



3. Connect the brake hoses through the existing location holes for the brake cable where applicable to the chassis.



4. Disconnect the brake hoses and brass adapter fitting from either of rear wheels, and connected them to 2 x new supplied brake hoses.



5. Caution:

* The supplied brake line #2 must be connected to the existing brake hose.

* The supplied brake line #1 must be connected to the stock brass adapter.




6. The control lever must be lowered when refilling and bleeding the brake system. (during normal driving).

7. Using this product during normal driving is prohibited.

8. The installer is able to determine any position where the line lock is mounted.

9. After accomplishing the installation of the line lock, make sure there is no any adopter leaking.

10. Please note the OE brake hose has male and female fittings, and adaptor of the line lock is suitable for both fittings. If the adaptor of brake hose which is connected to your vehicle is not the right fitting, change the adaptor of the brake hose 1 to the other side.

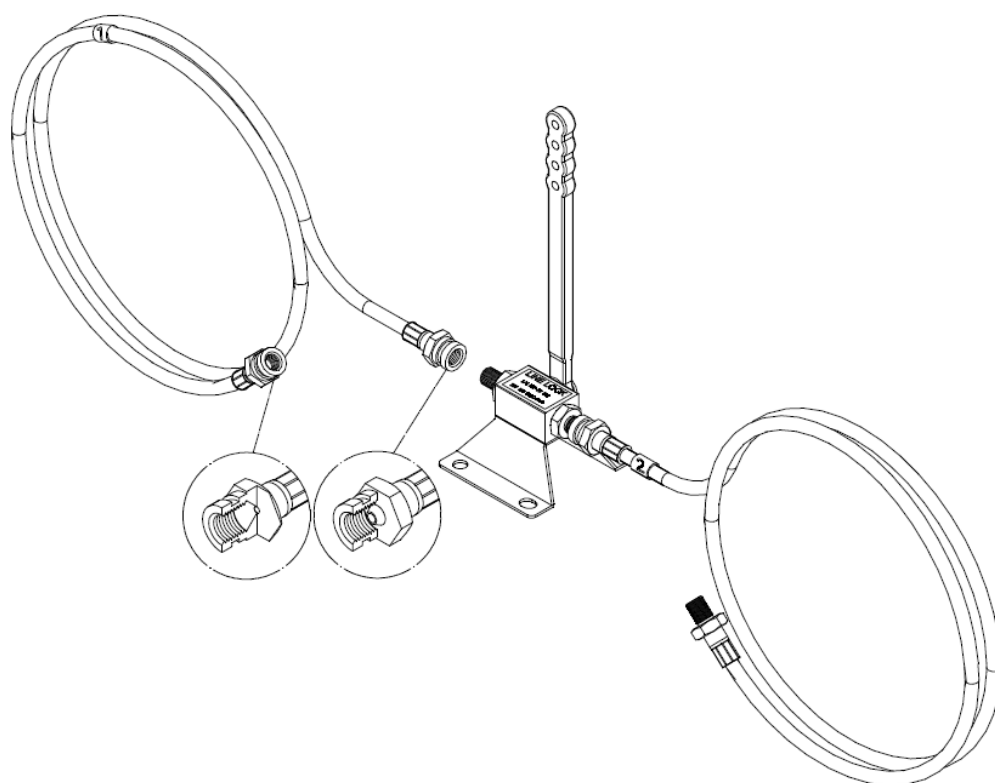

TECH VIEW CO., LTD.